



U-MOVER

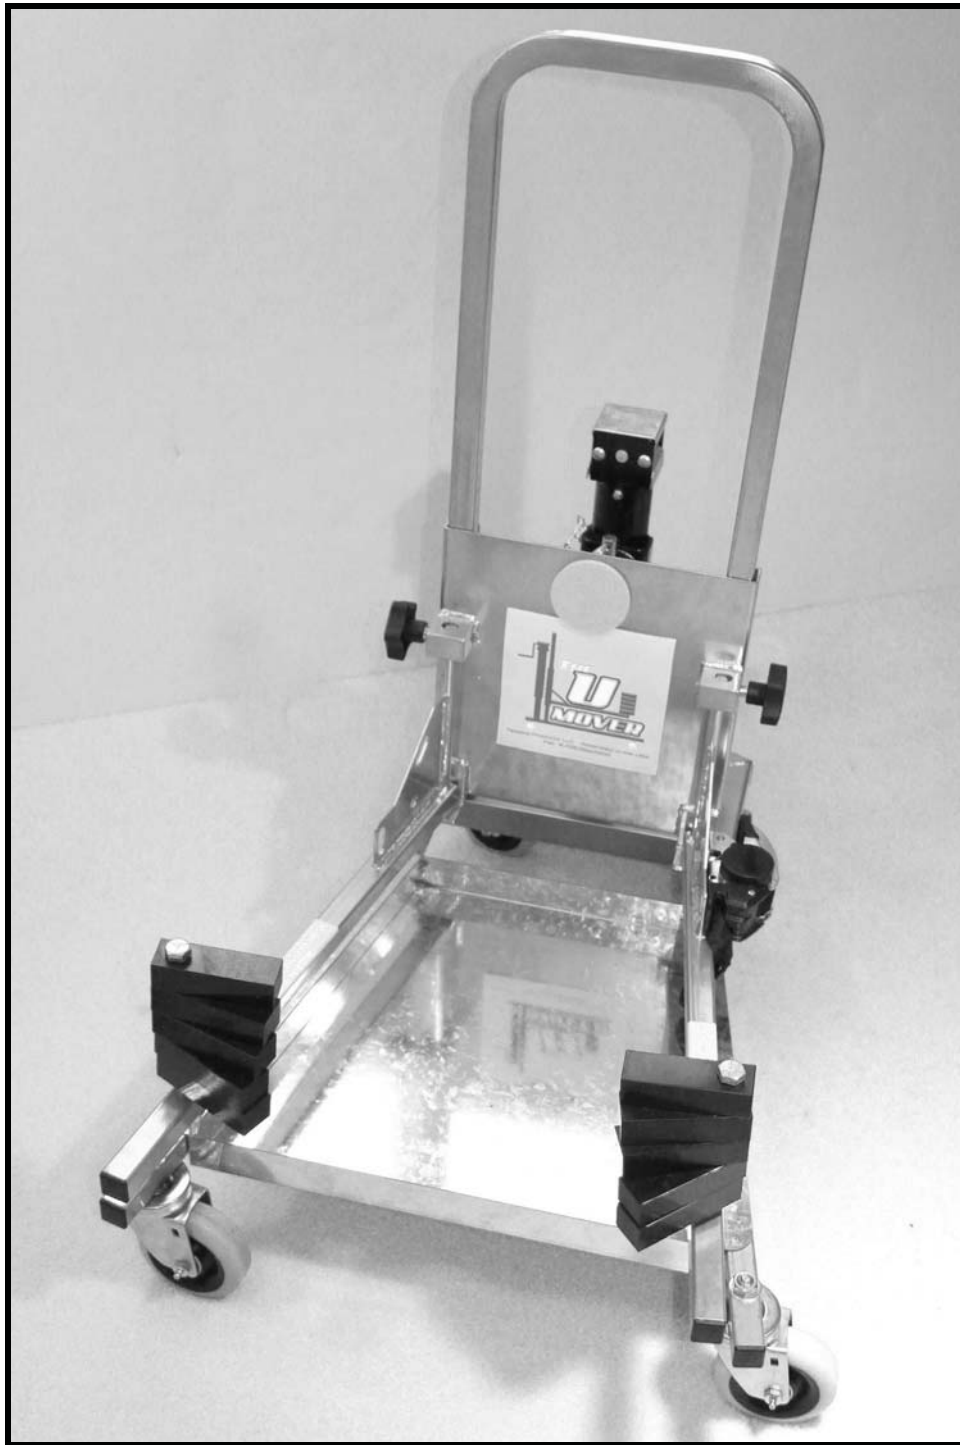

Tools required for assembly: Two $\frac{3}{4}$ " wrenches (Not supplied)

Assembly Steps

Step 1)

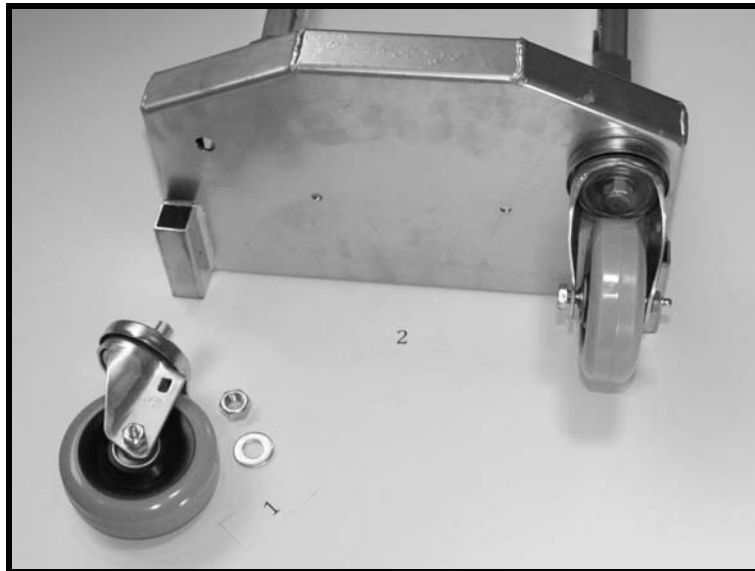


Attach the two 4" rear casters with shorter bolts (part #1) to the main stand (part #2). The casters are attached with washers and nuts provided in the plastic bag.

Step 2)



Attach the two 4" front casters with longer bolts (part #3) to bottom legs with slight bend (part #4). The casters are attached with washers and nuts provided in the plastic bag. Attach wheels so that when the next step is done, shown in Step 3, legs will bend to the *outside*.

Step 3)

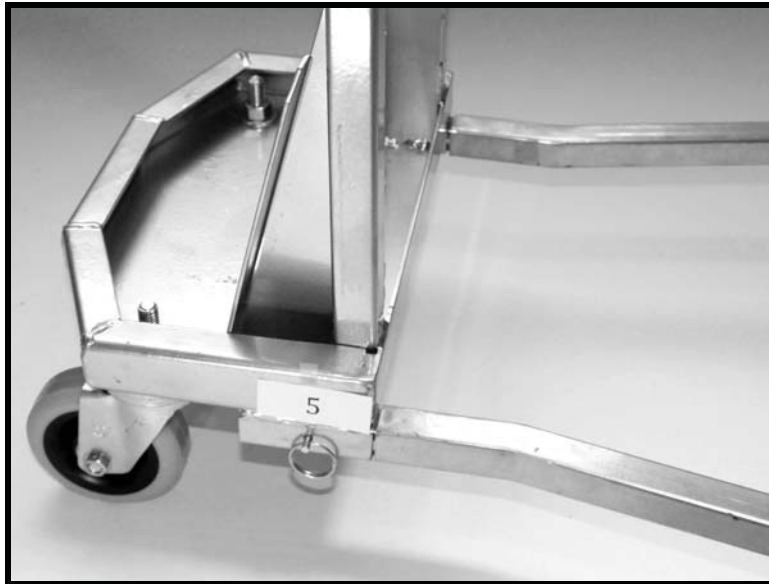


Legs (part #4) attach to main stand (part #2) with two hitch pins provided (part #5). *Note that legs spread outward once mounted.*

Step 4)



Slide guide plate (part #6) over and down onto main stand (part #2).
CAUTION – avoid pinched fingers!

Step 5)

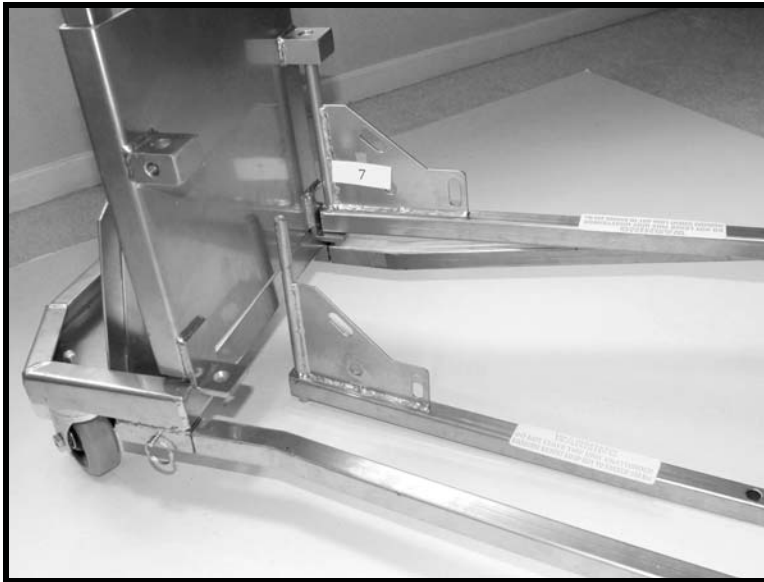


Attach the 2 lifting arms (part #7) with warning labels facing up into slotted holes on each side of main stand (part #2) and drop into place.

Step 6)




Screw in the two star shaped jib knobs (part #8) to threaded holes to secure the arms.

Step 7)

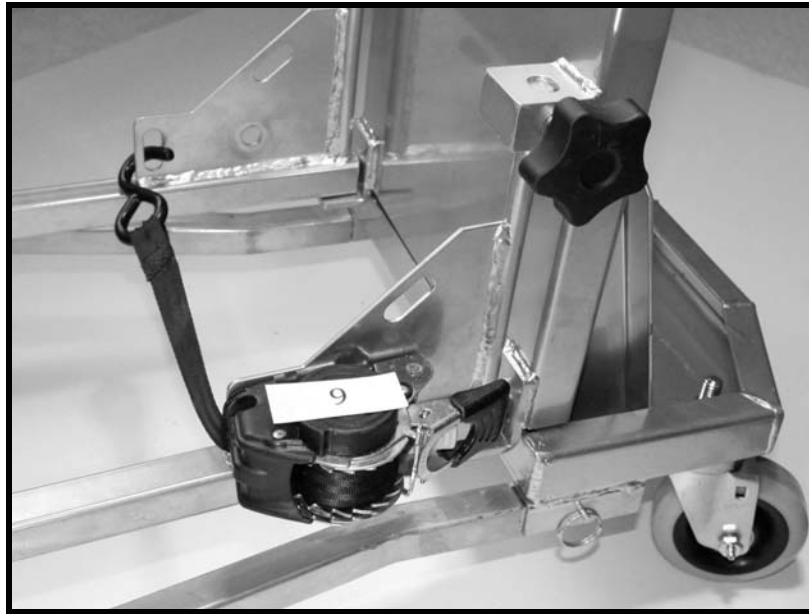

Attach the retractable ratchet strap (part #9) to either side of one lifting arm (part #7) with bolt, washer, and nut in the bag supplied with the ratchet strap. The bolt should insert from the frame side into the washer and nut set inside the ratchet. *You may find it easier to mount the strap prior to inserting the lifting arm into slotted hole.*

Step 8)

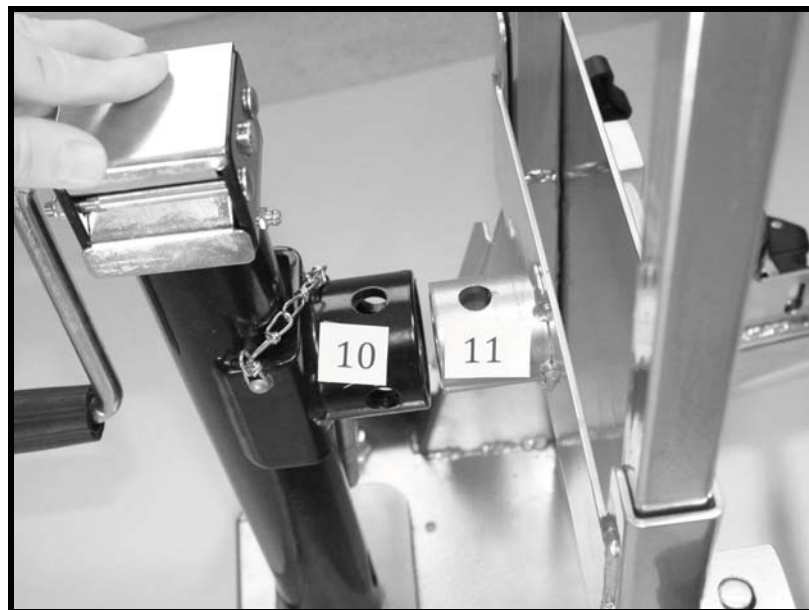


Attach jack (part #10) to cylindrical steel piece (part #11) welded on main stand (part #2) using hitch pin attached to jack (part #10).

Step 9)



Attach 5 grey “fingers” with bolt provided in plastic bag on each side (part #12). Insert bolt through fingers and attach/tighten one nut. Insert through hole in lifting arm (part #7) and add one washer and nut, then tighten. Do this on each side.

Step 10)

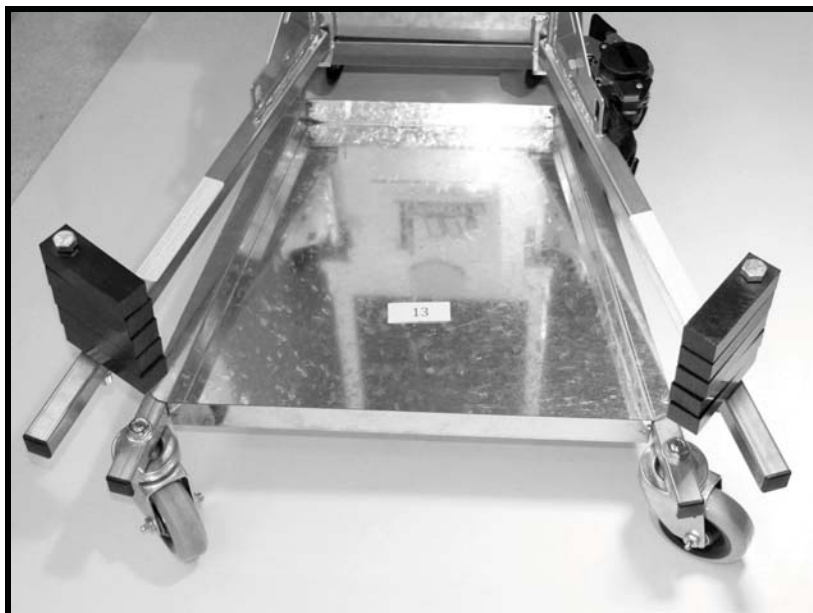

Insert drip pan (part# 13) between bottom legs. The pan is not secured, but lies on top of the legs allowing quick installation and removal.

Please visit our website for full instructions and “How to” video.

www.theumover.com